


STANDARD ARRIVAL CHART
INSTRUMENT (STAR) - ICAO

TRANSITION
LEVEL : 1500

ANAPA, RUSSIA
VITYAZEVO
RWY 04

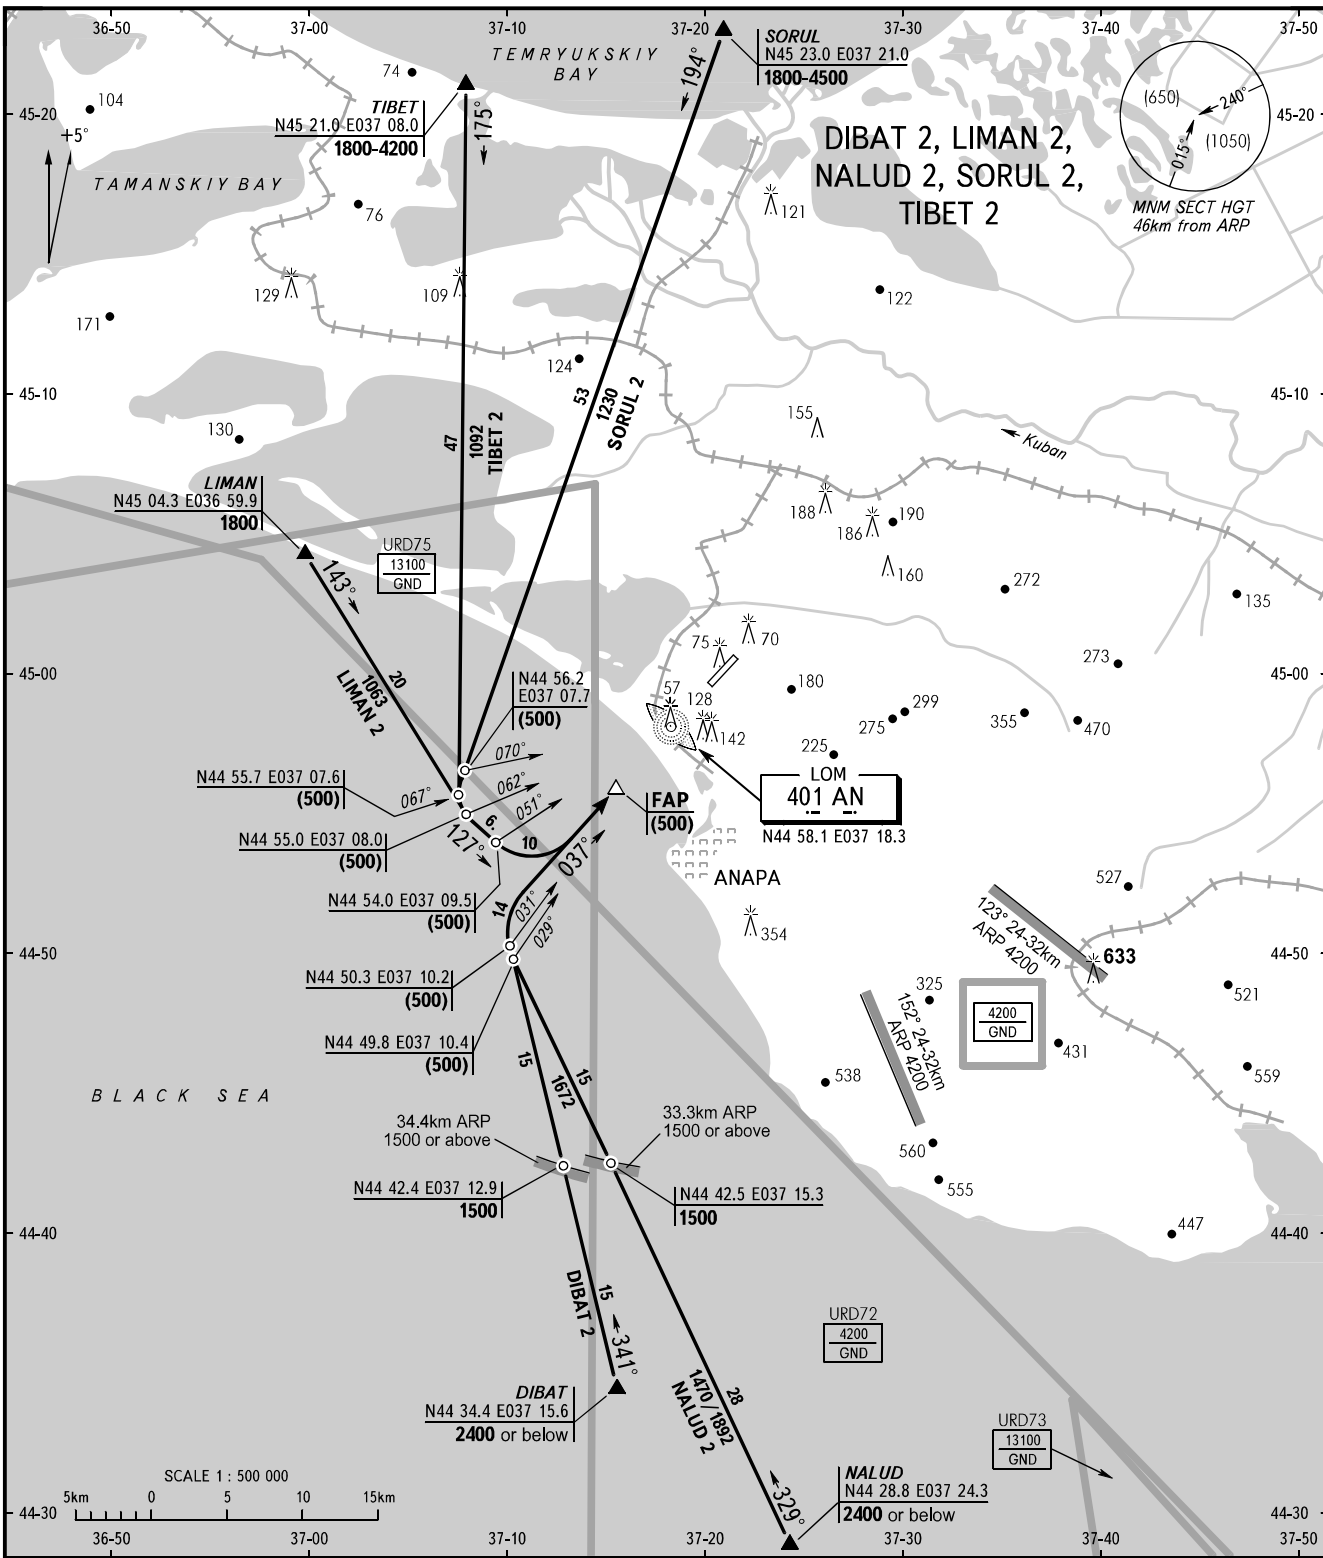

ROSTOV-CONTROL (Serves as ANAPA-APP to FL 2400) **122.9**
KRUG **118.7**

WARNING:
1. FL by ATC.
2. Arrival and approach-to-land procedure till establishing on final shall be carried out under control of ATC controller.

BEARINGS AND TRACKS ARE MAGNETIC
ALTITUDES, HEIGHTS AND ELEVATIONS ARE IN METRES
DISTANCES ARE IN KILOMETRES

CHANGE: LOM